


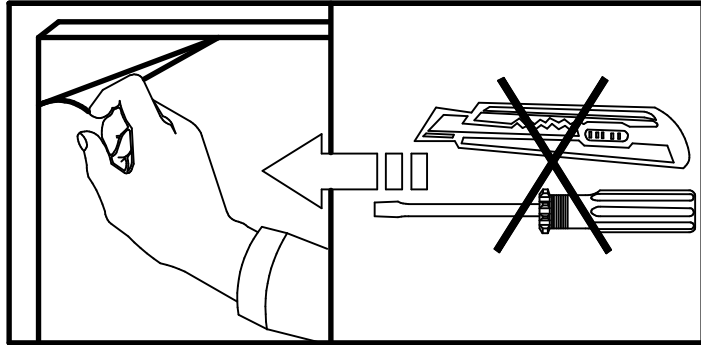
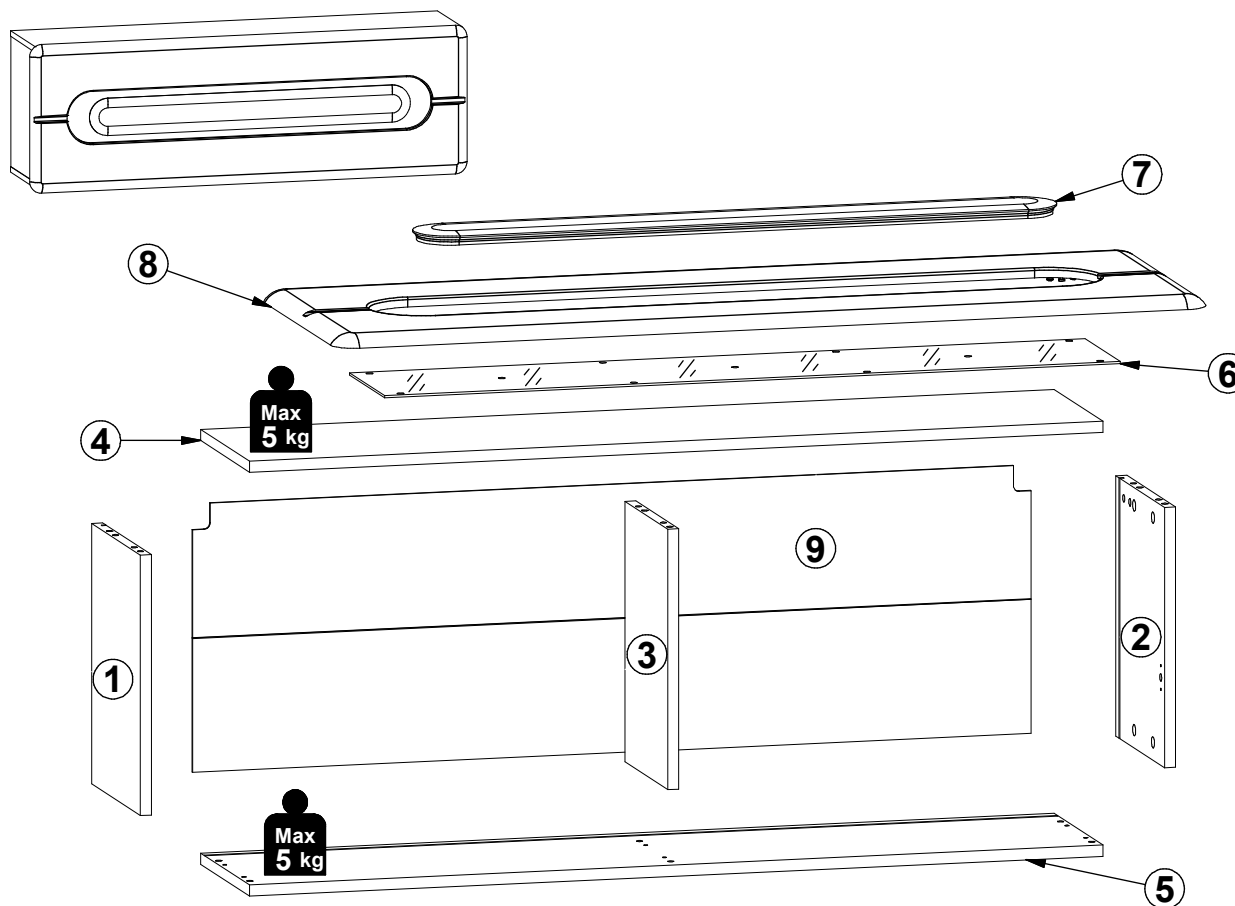
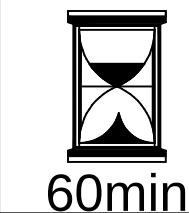
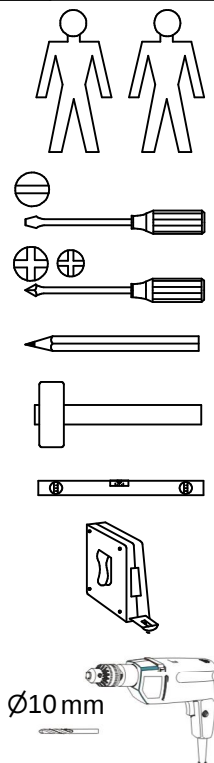
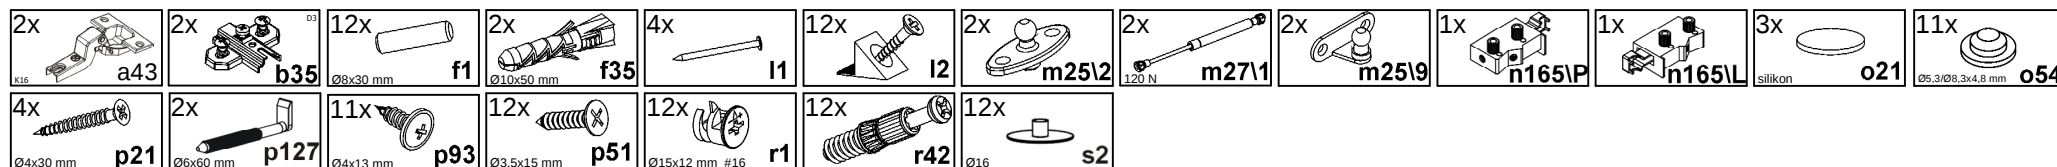
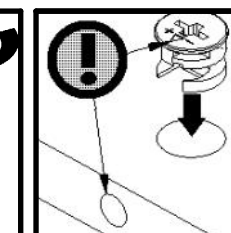
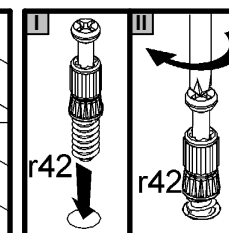
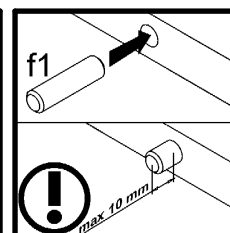
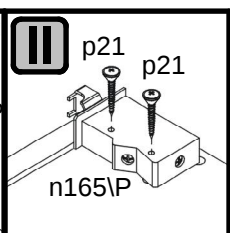


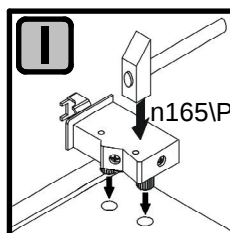

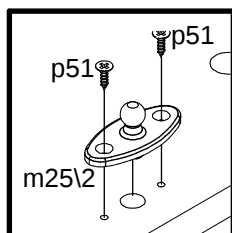




A	B	C (mm)		D
1	S506-1020	350	250	1/2
2	S506-1021	350	250	1/2
3	S506-1022	350	220	1/2
4	S506-2015	1171	250	1/2
5	S506-2016	1171	250	1/2
6	S506-5506	1009	179	1/2
7	S506-7019	100	880	2/2
8	S506-7020	400	1200	2/2
9	S506-9307	1150	361	1/2

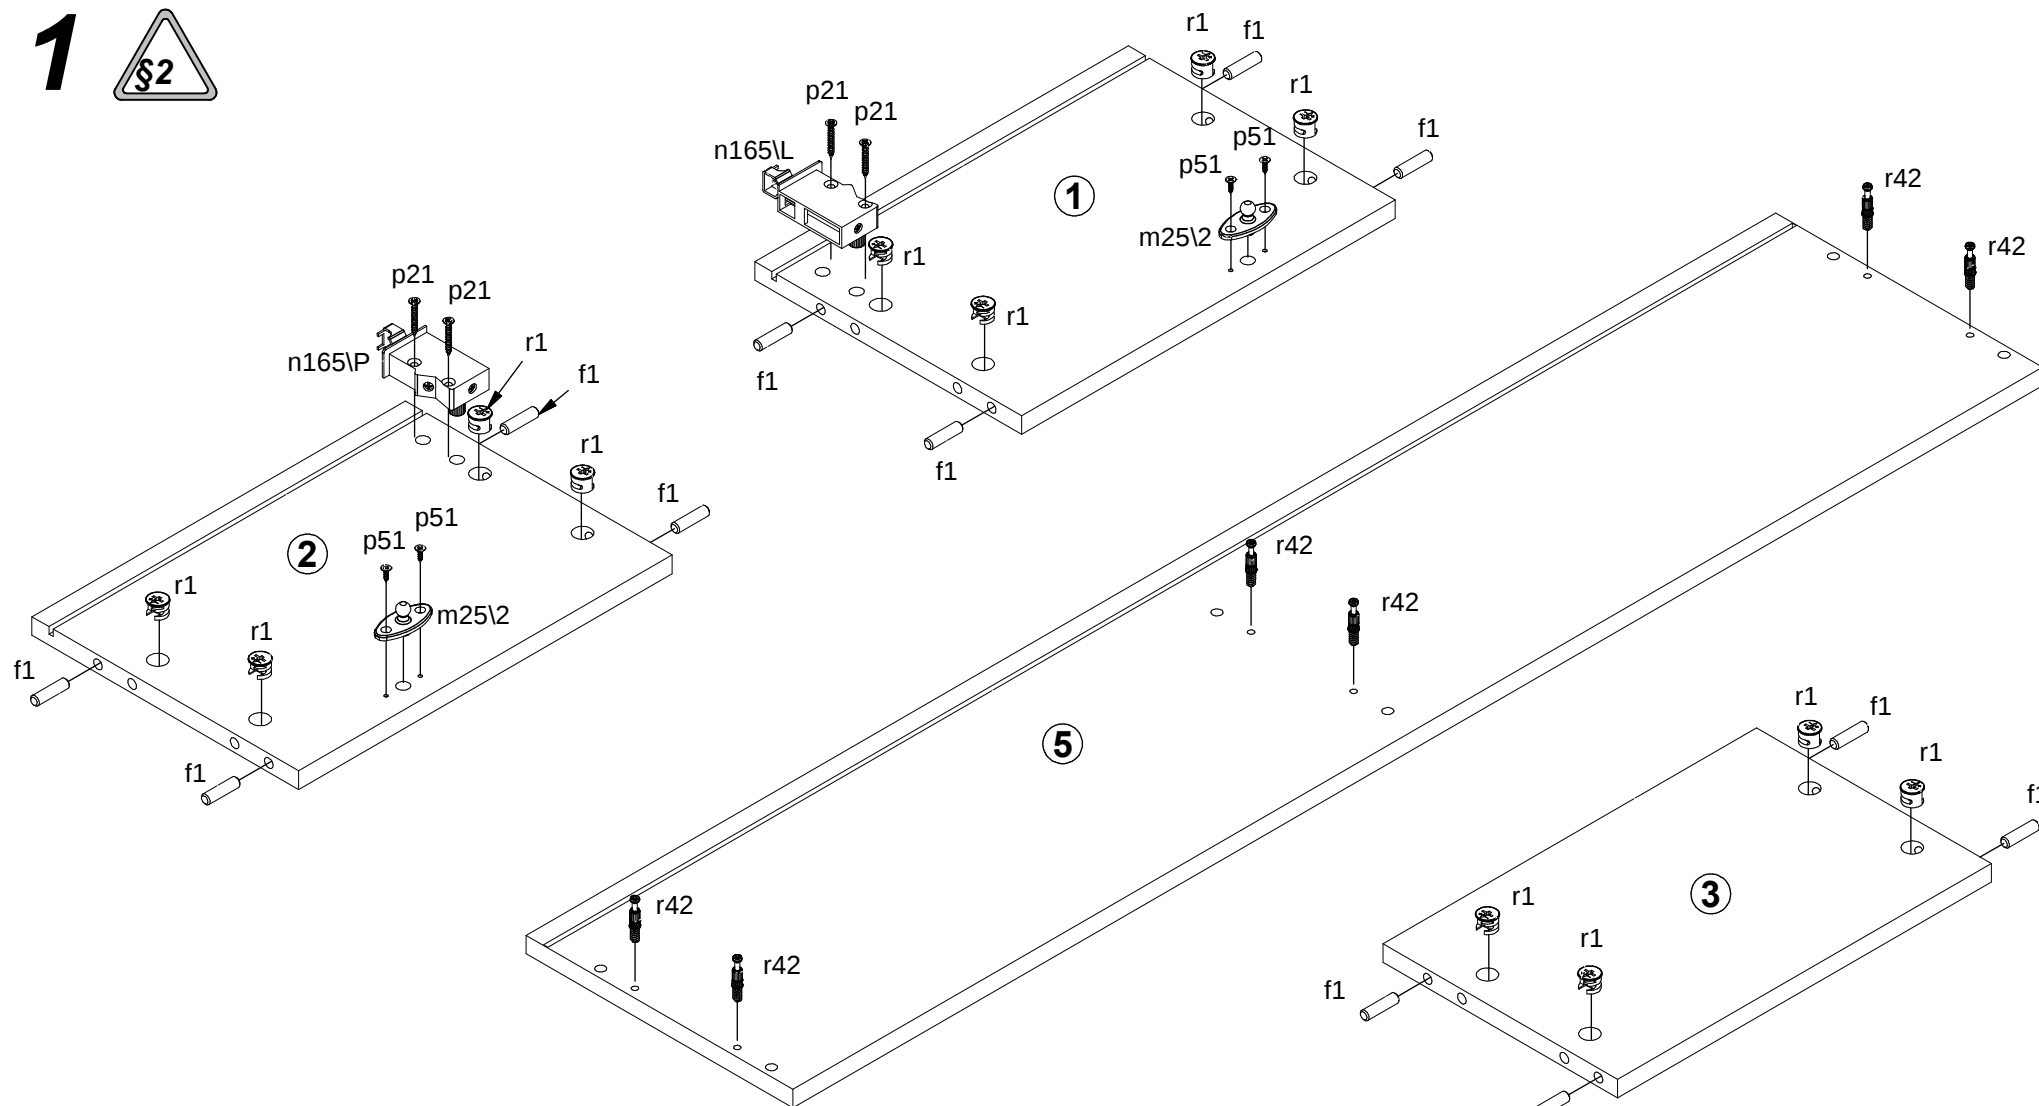

1 

1









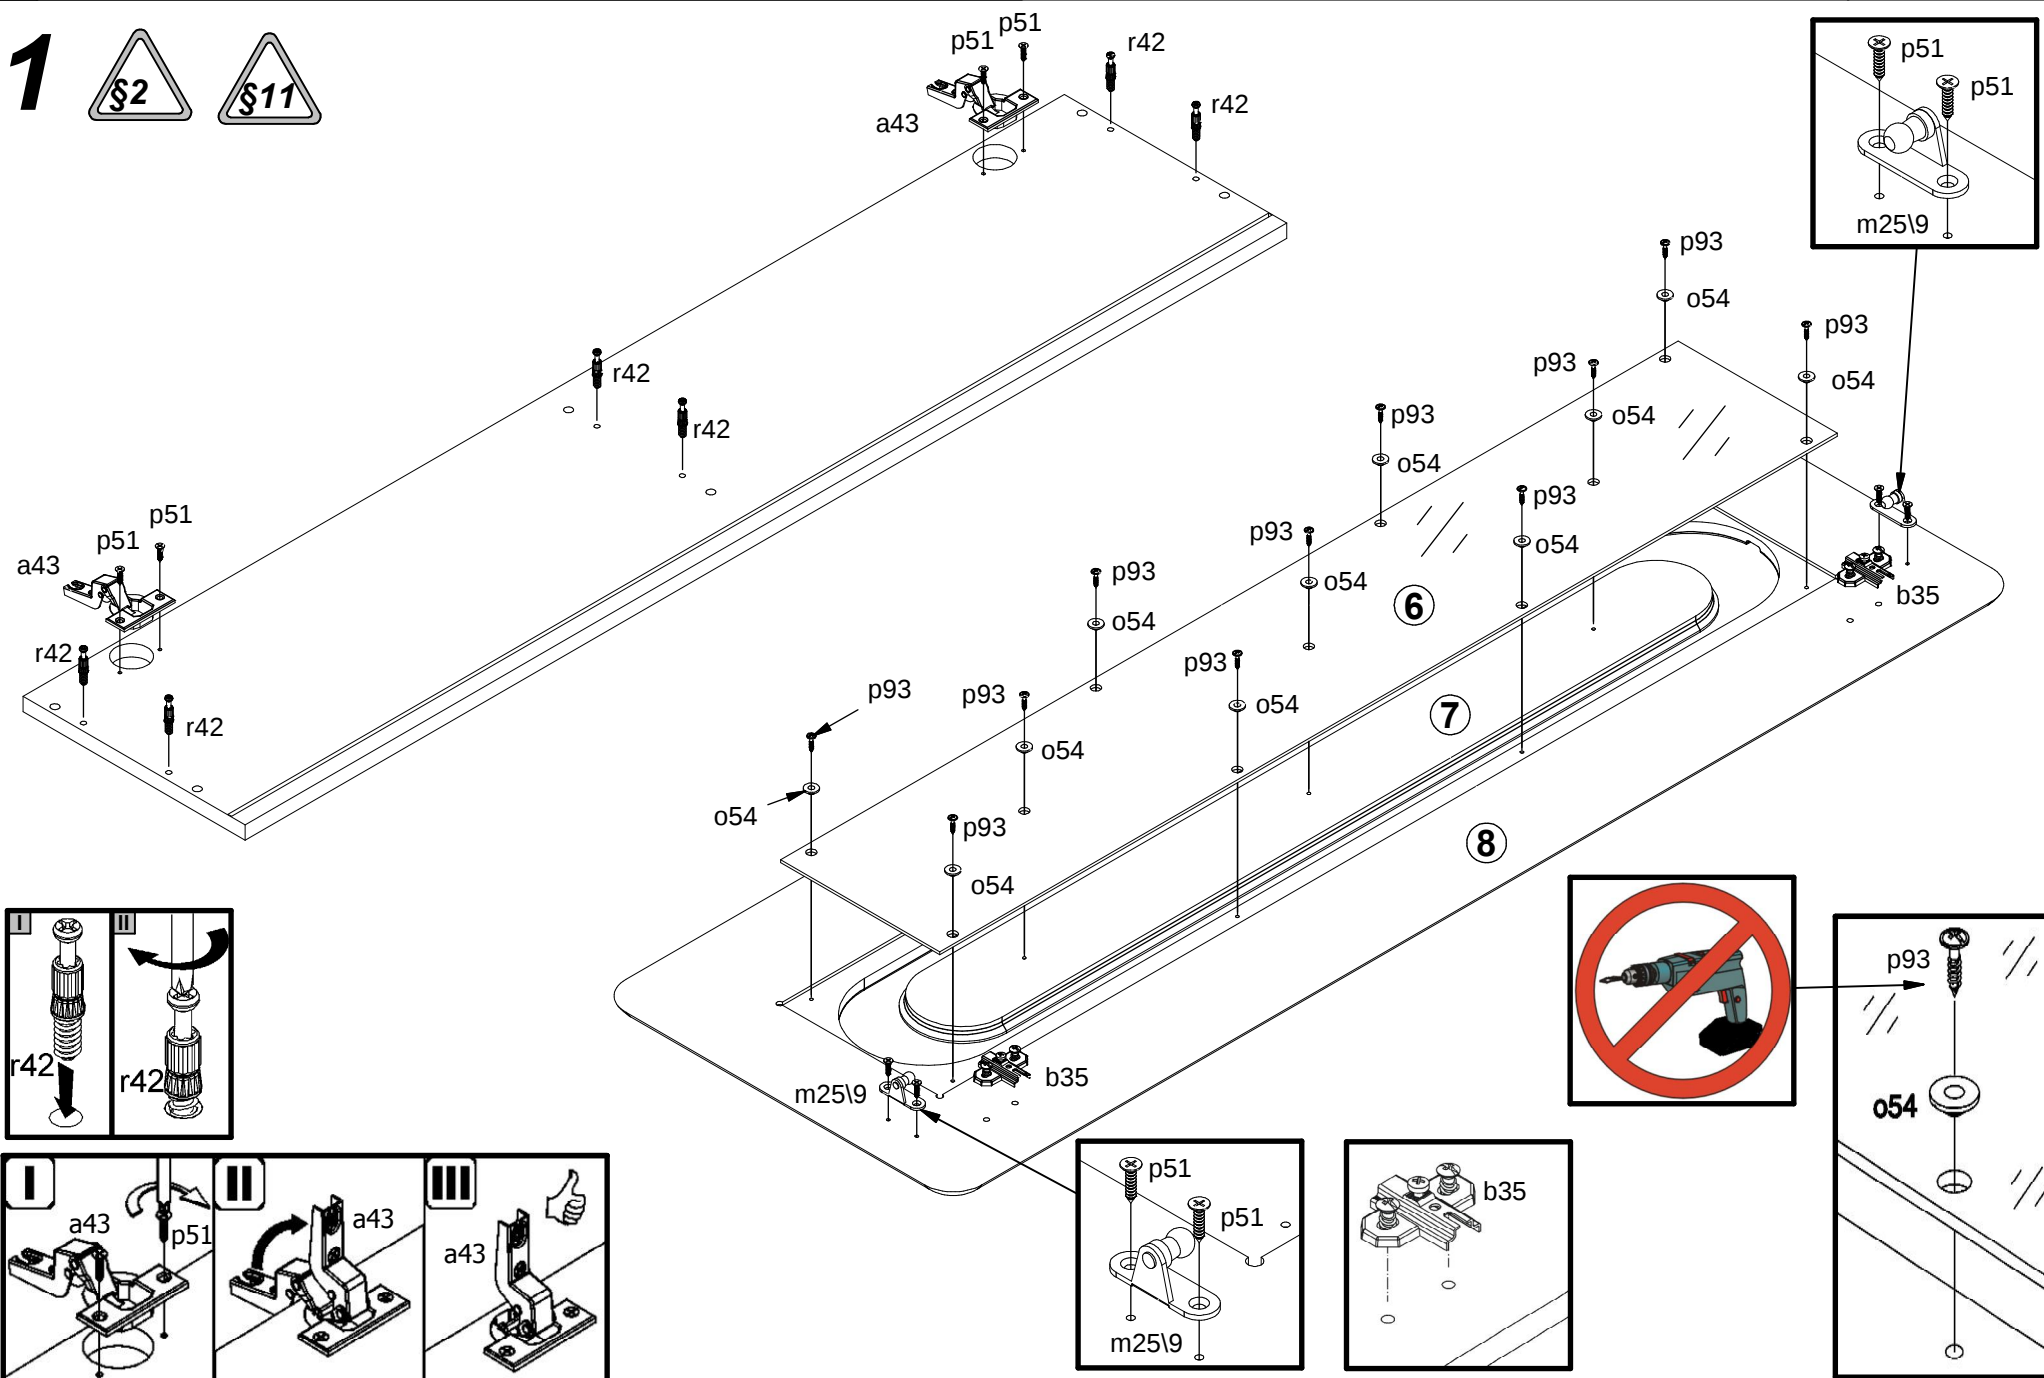


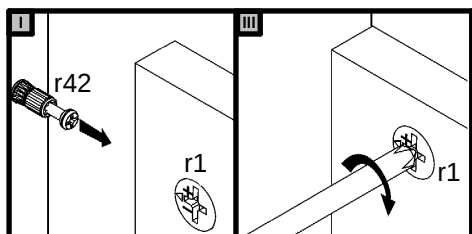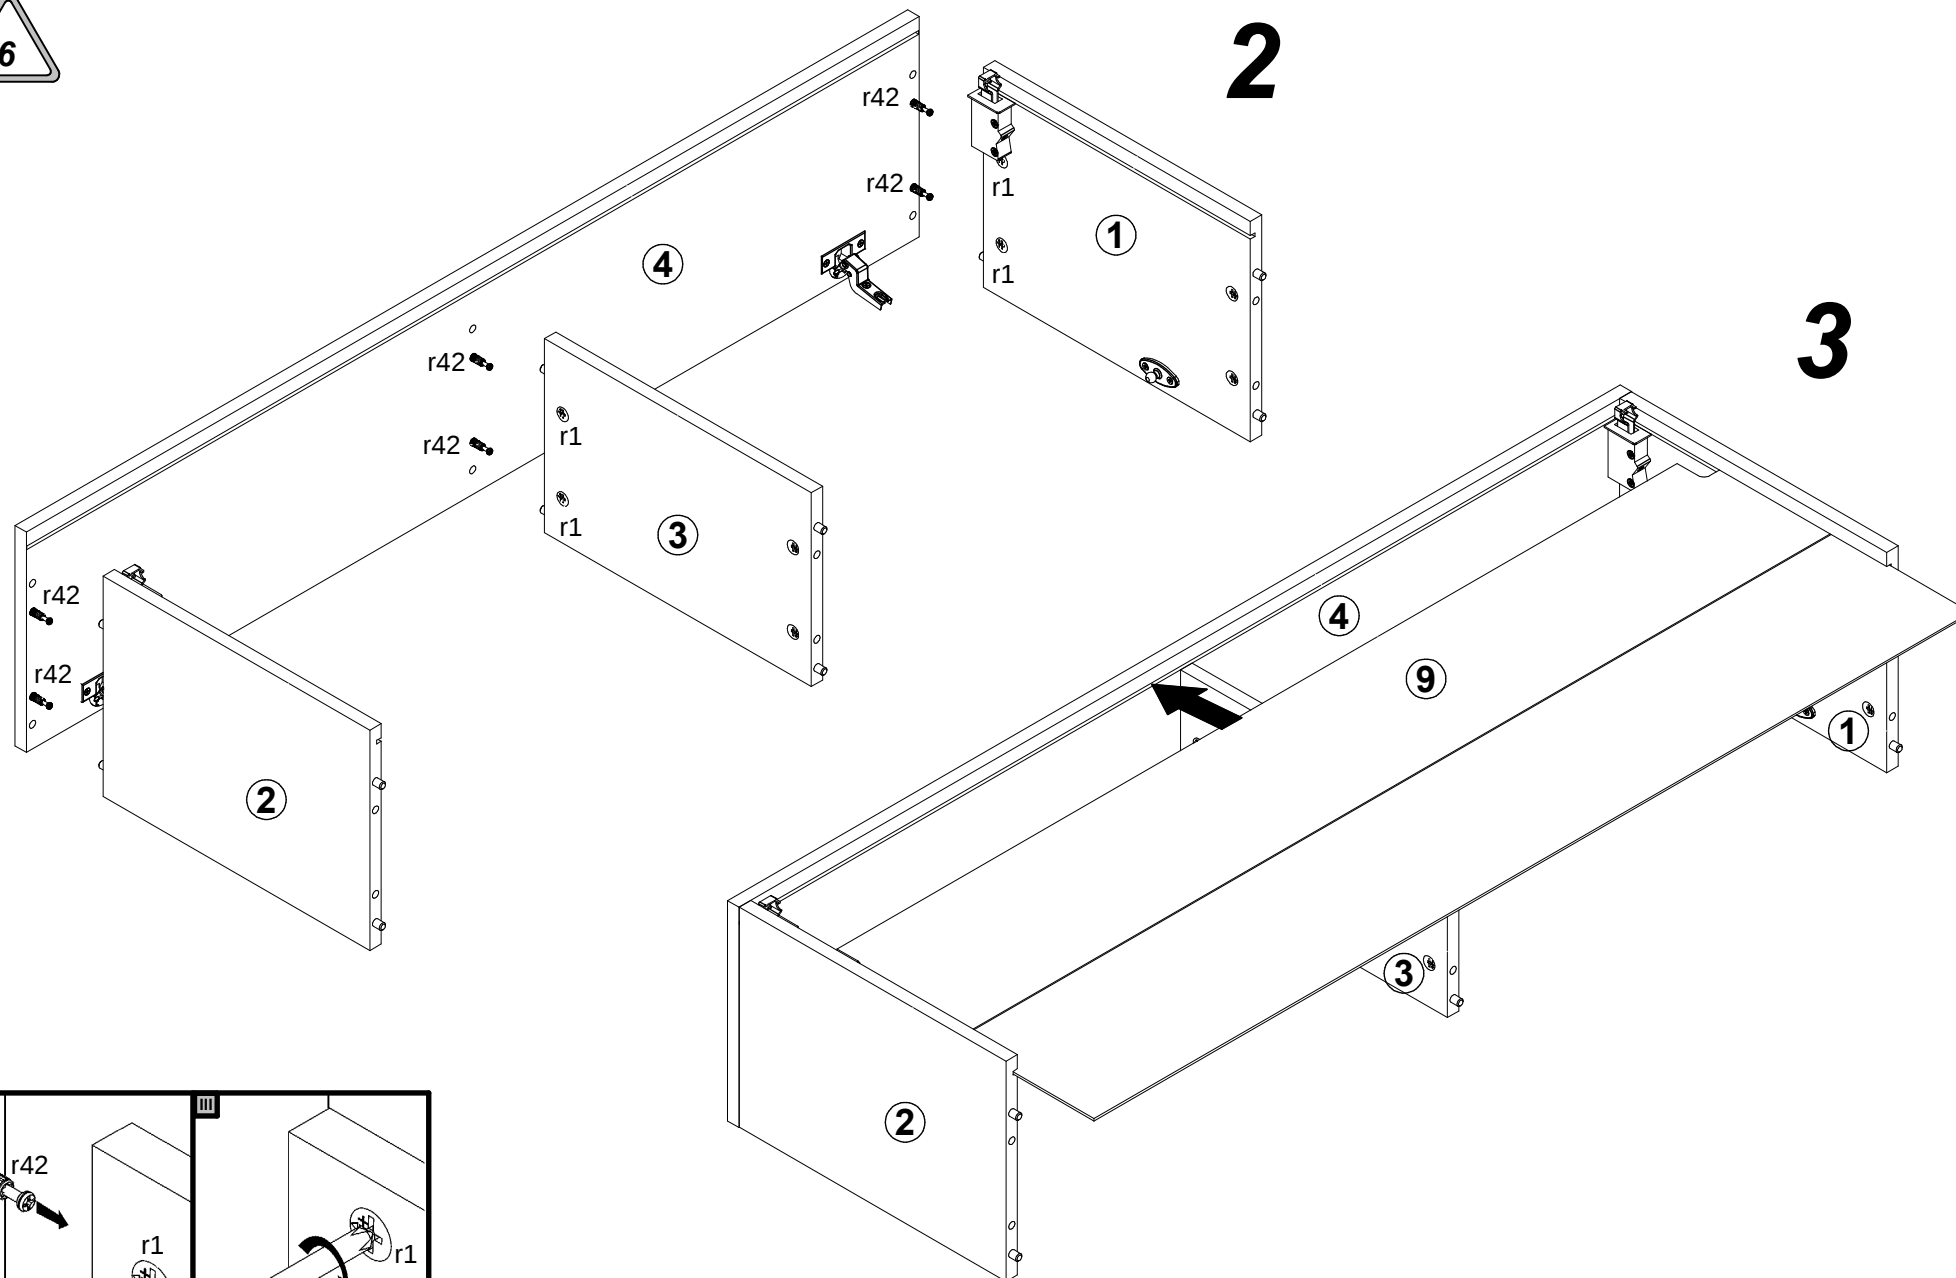





4




5

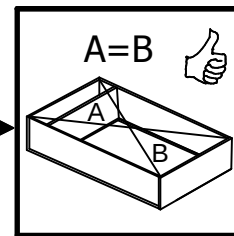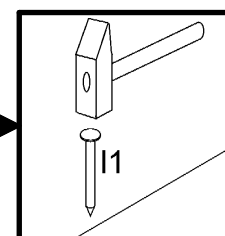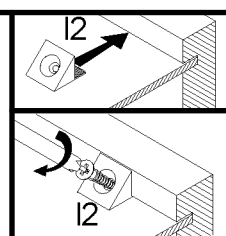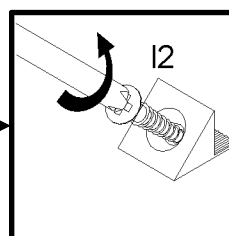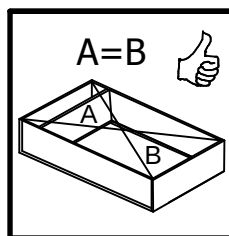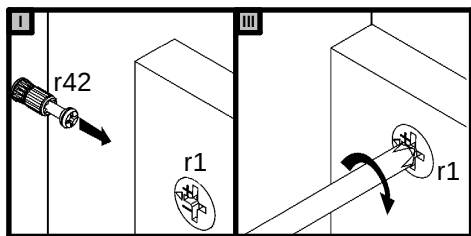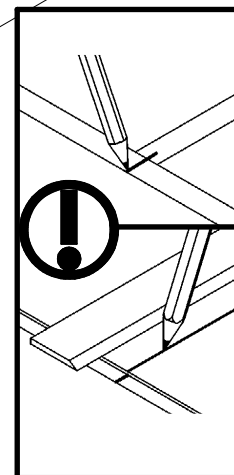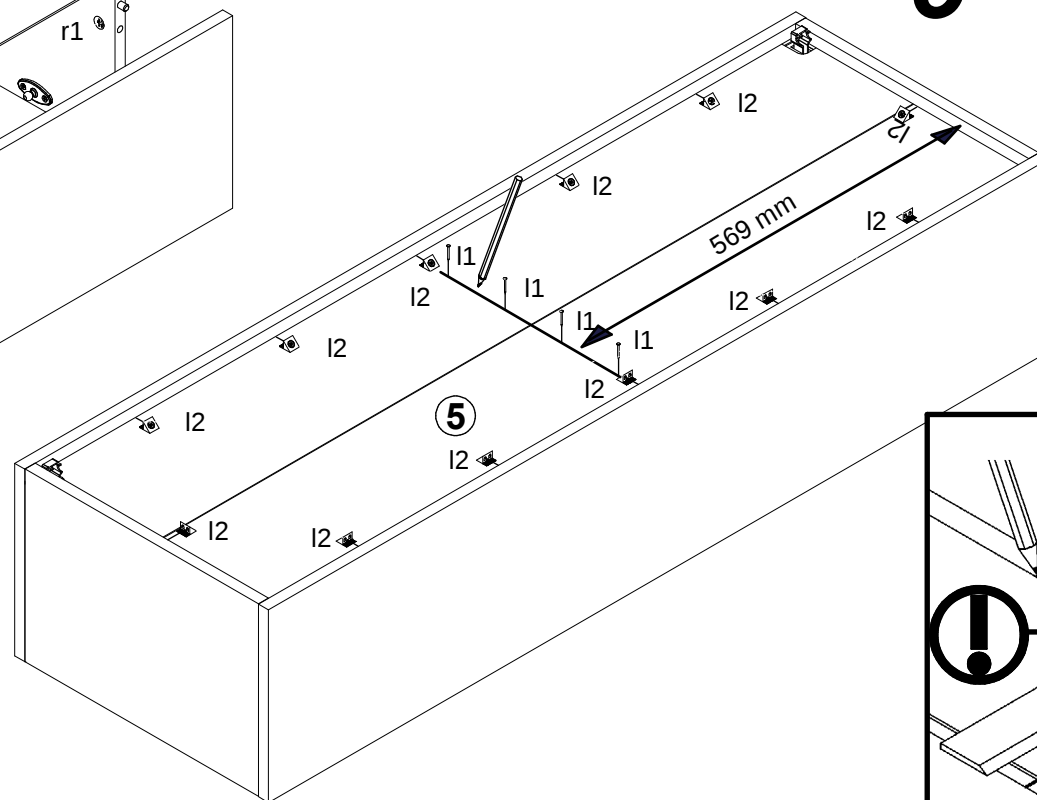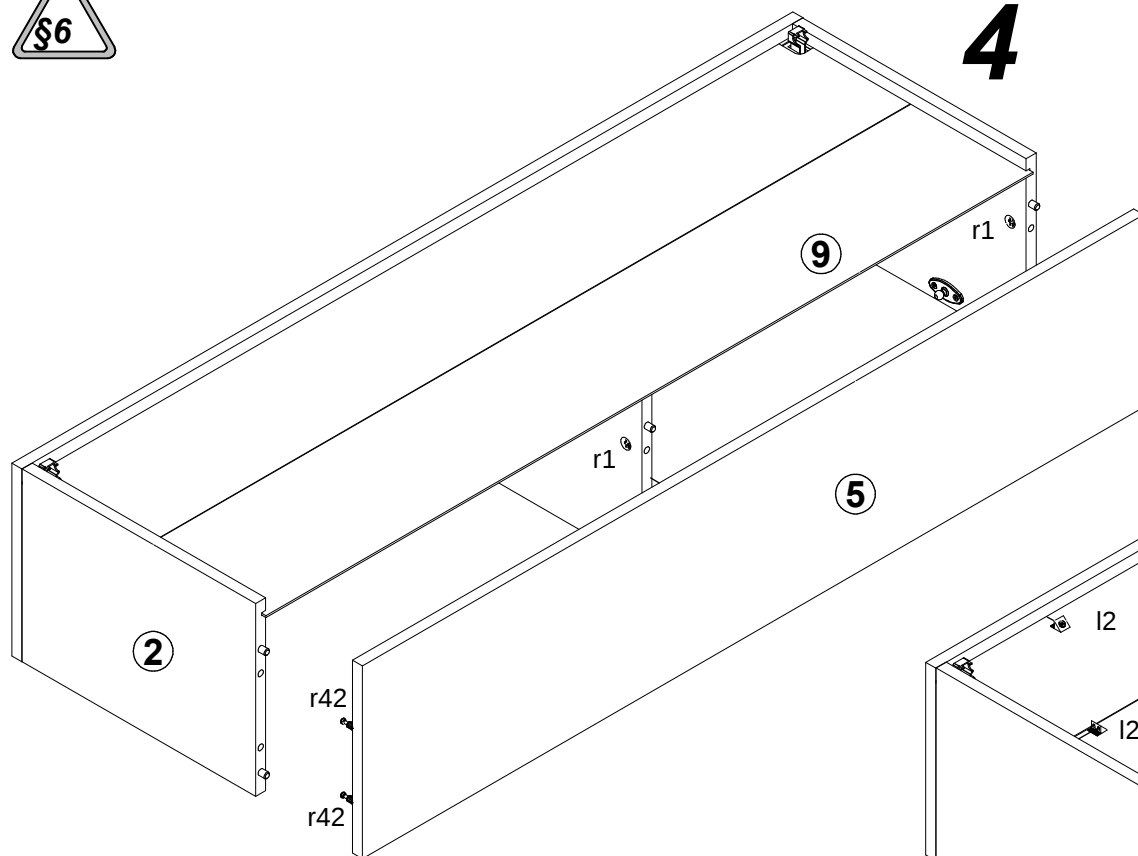

6



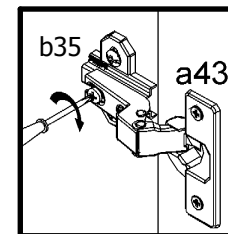
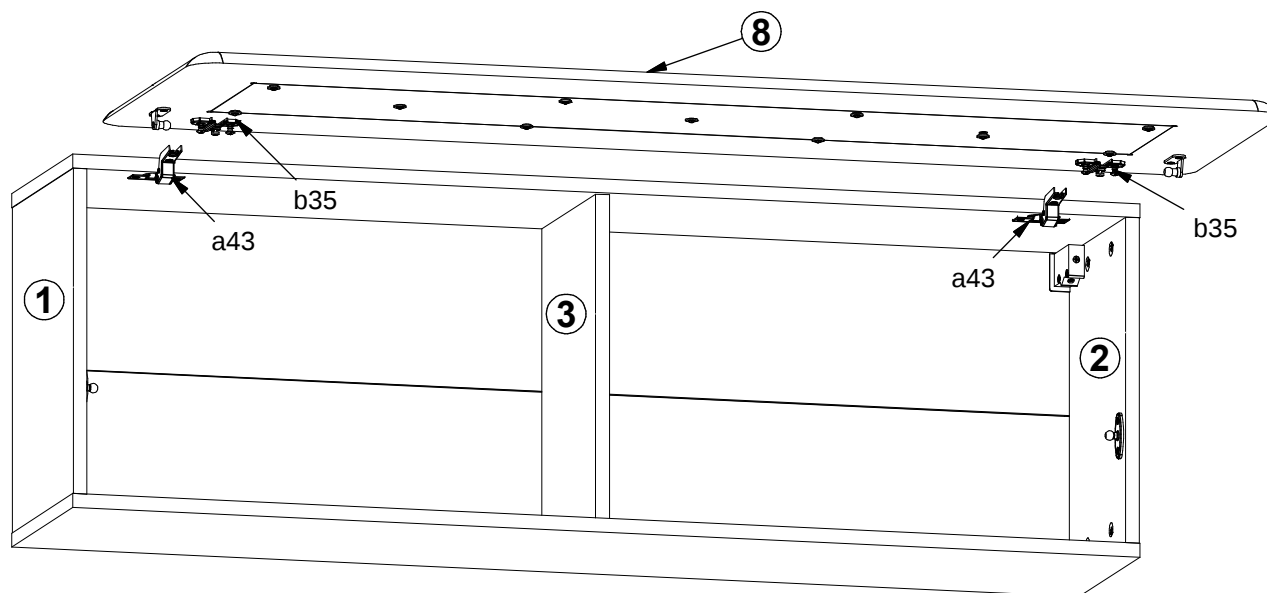


7

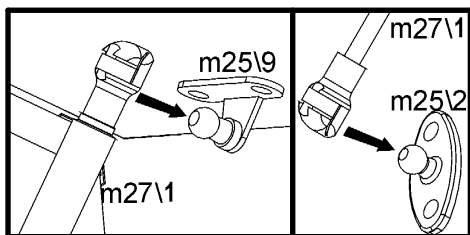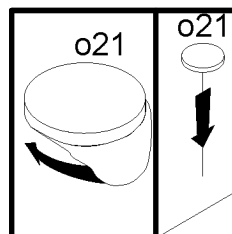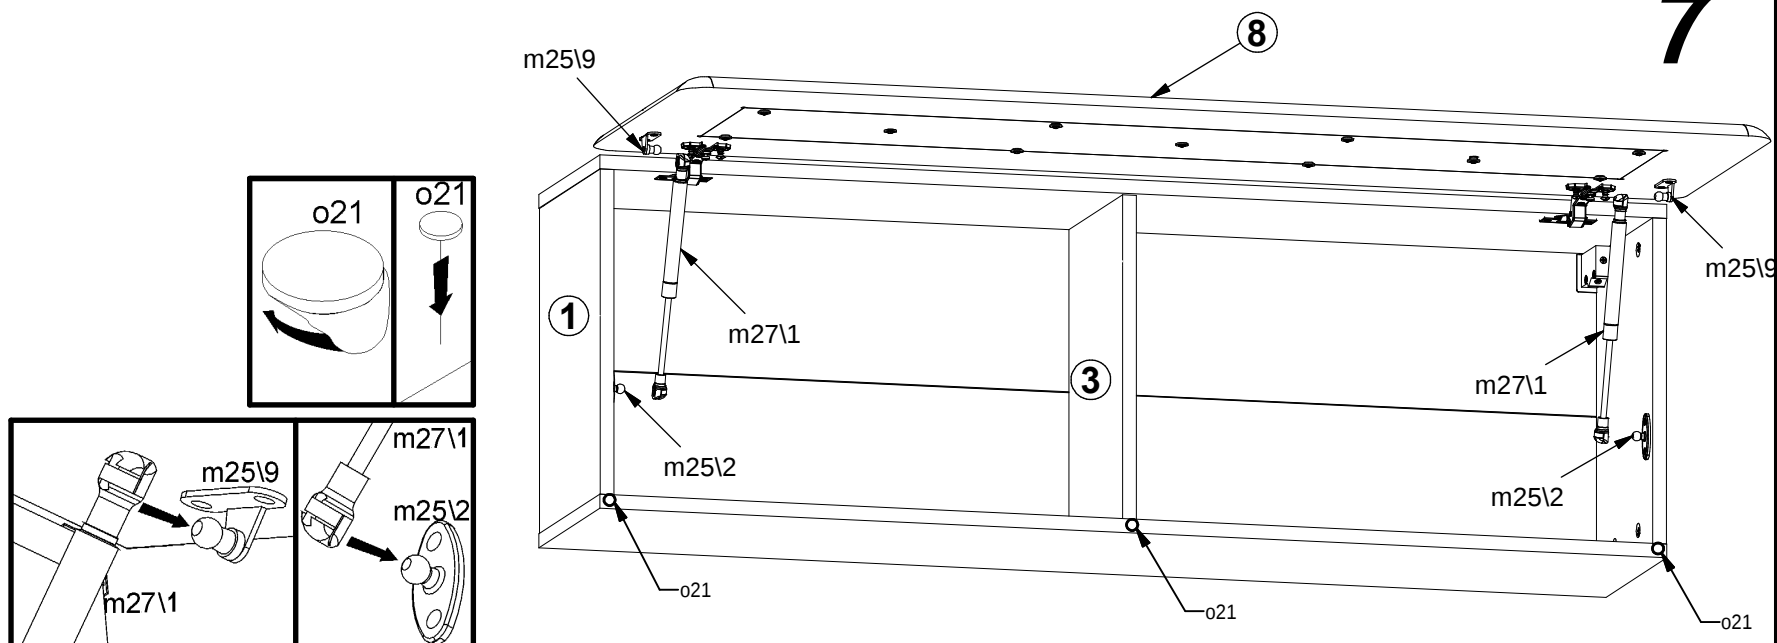





8

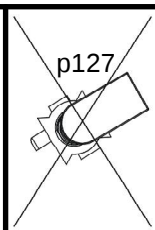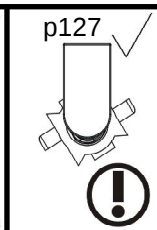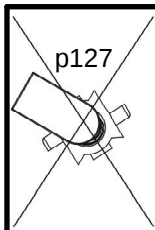 $\phi 10 \text{ mm}$ 







f35

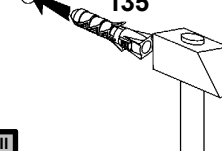

f35

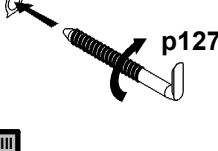

f35

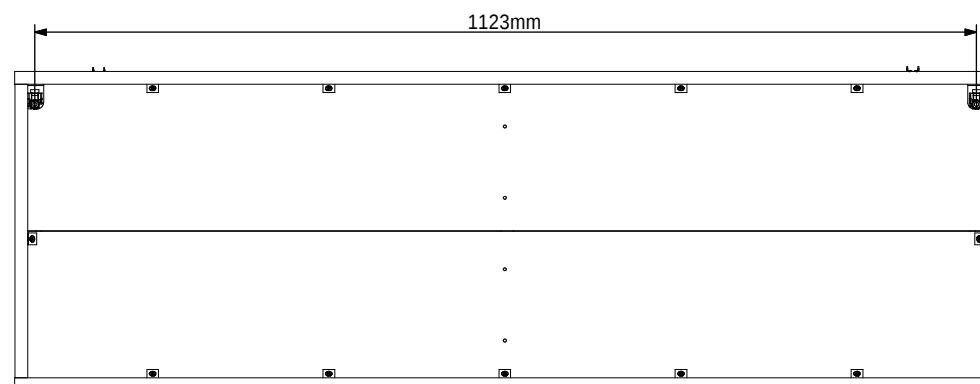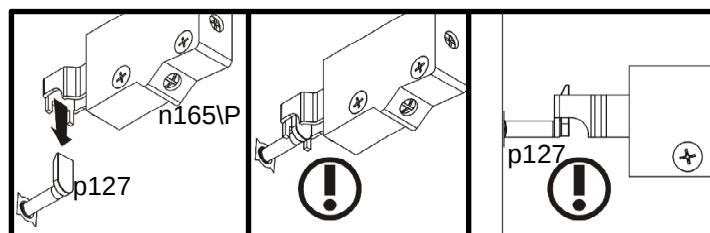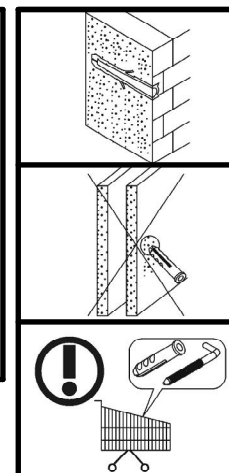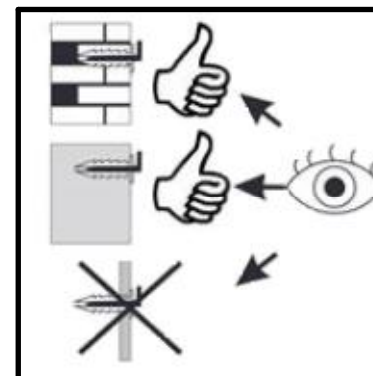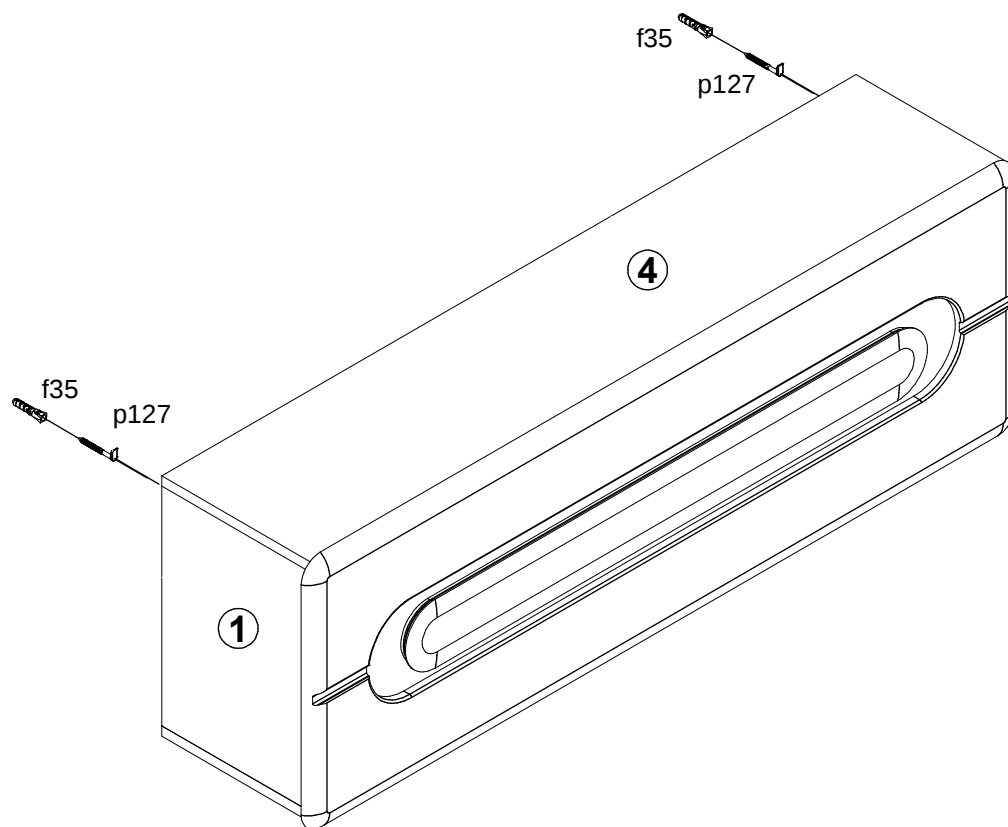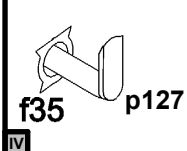

9

